



Max Volume Test Procedure

Disclaimer:

Before performing the **Max Volume Test**, please follow these instructions carefully to avoid equipment damage:

1. **Disconnect All Inlet Hoses**

Ensure that no hoses are connected to the inlet port of the machine.

2. **Install New, Unused Filters**

Only perform this test with clean, unused filters.

Warning: Using saturated or previously used filters may result in inaccurate readings or damage to internal sensors.

3. **Need Assistance?**


If you are unsure how to proceed with this test, please contact to <https://fumefiltration.com/create-helpdesk-support-ticket> for guidance before continuing.

4. You Tube Video: <https://youtu.be/MX-qAGG5t-4>


Step 1

With the unit showing the normal main display screen, press the left and right arrow keys simultaneously. All four arrow keys illuminate and flash.

The display screen changes from:

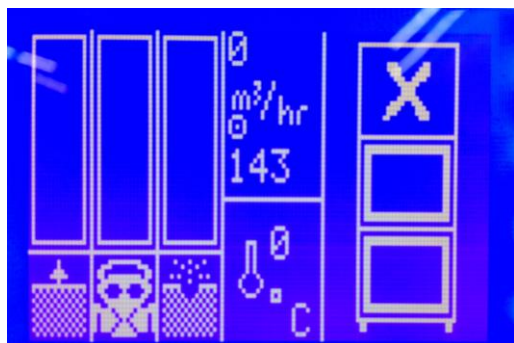

to:

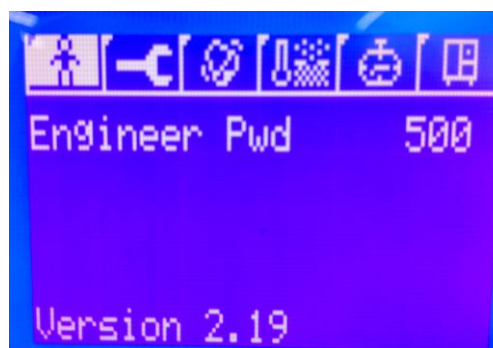

Press the **down** arrow key twice to change this number to **498**, then press the **right** arrow key once.



Max Volume Test Procedure

The following screen appears:



Go down 3 times until **Max Volume** is highlighted. Press left to start the Max Volume. Wait until the machine stops running and give you a CFM value. If the value is 0, contact BSE Technical Support for guiding.

FumeFiltration.com / Jorlink.com / (336) 288-1613
sales@fumefiltration.com / sales@jorlink.com
Jorlink USA, Inc, 3714 Alliance Dr.,
Suite 100, Greensboro, NC 27407