


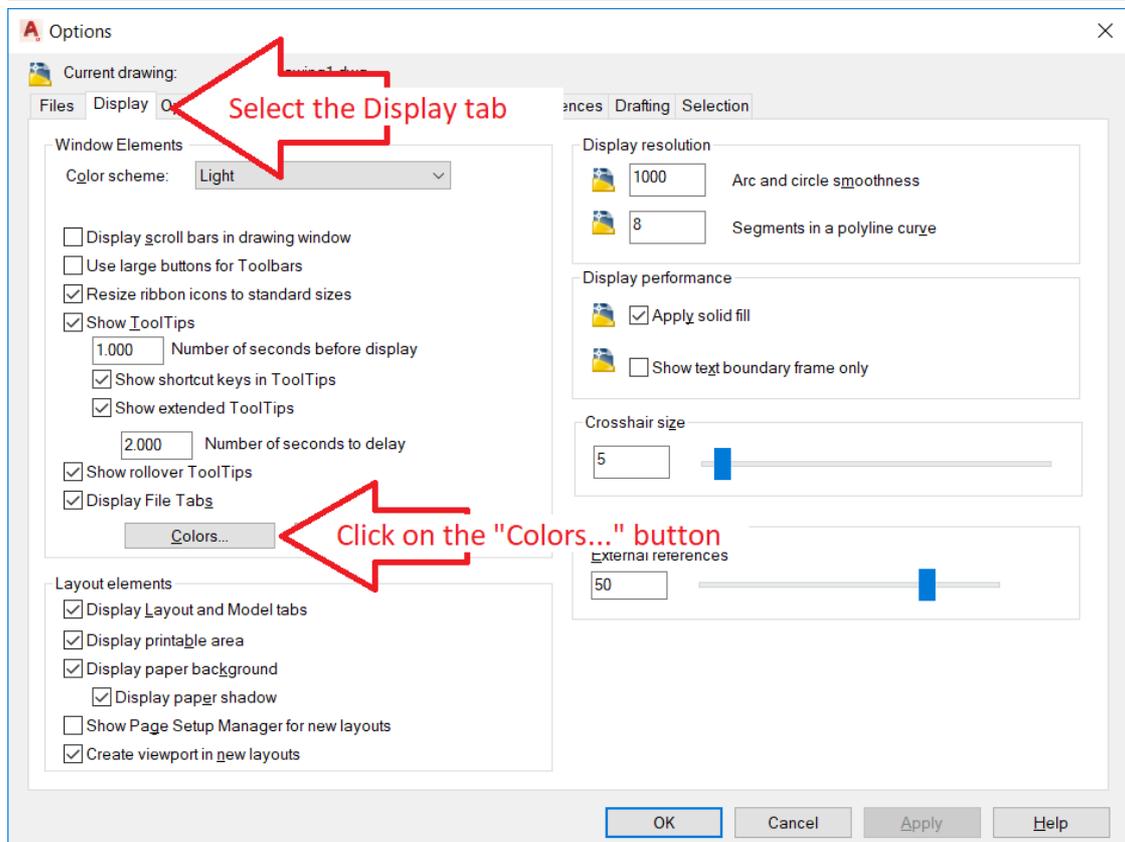
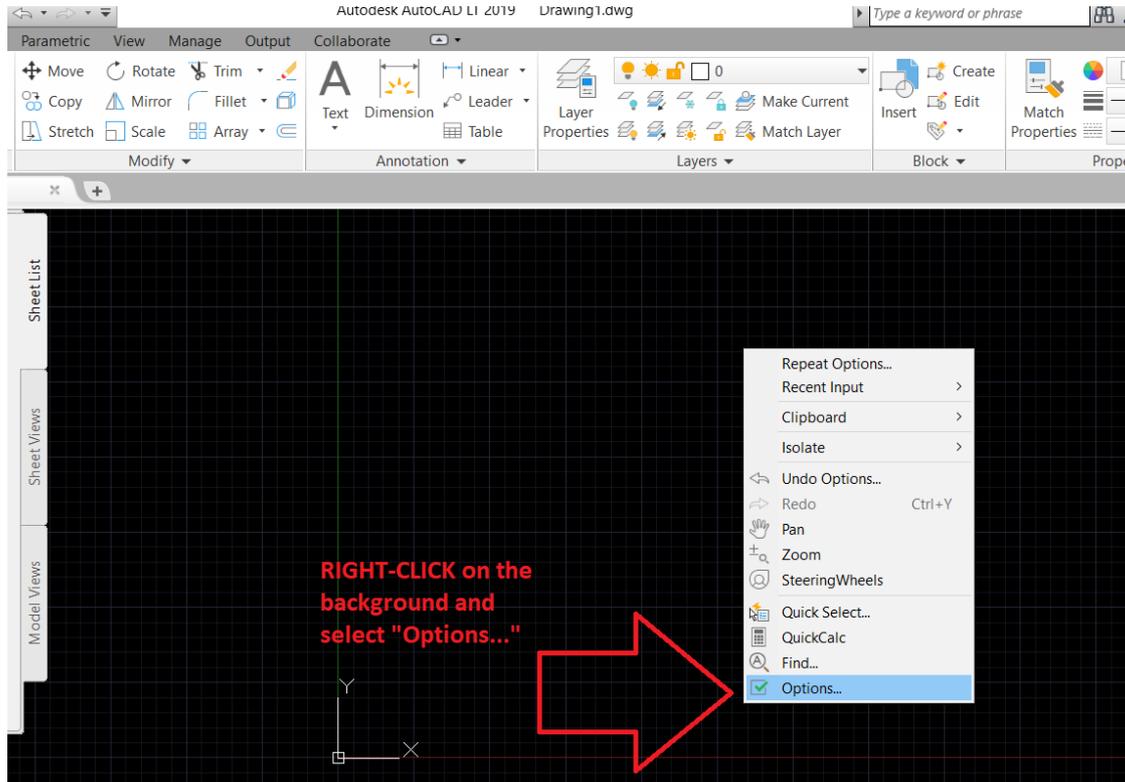


Step1: In order to distinguish the parameter of black color. Open a new file and change windows element as white.

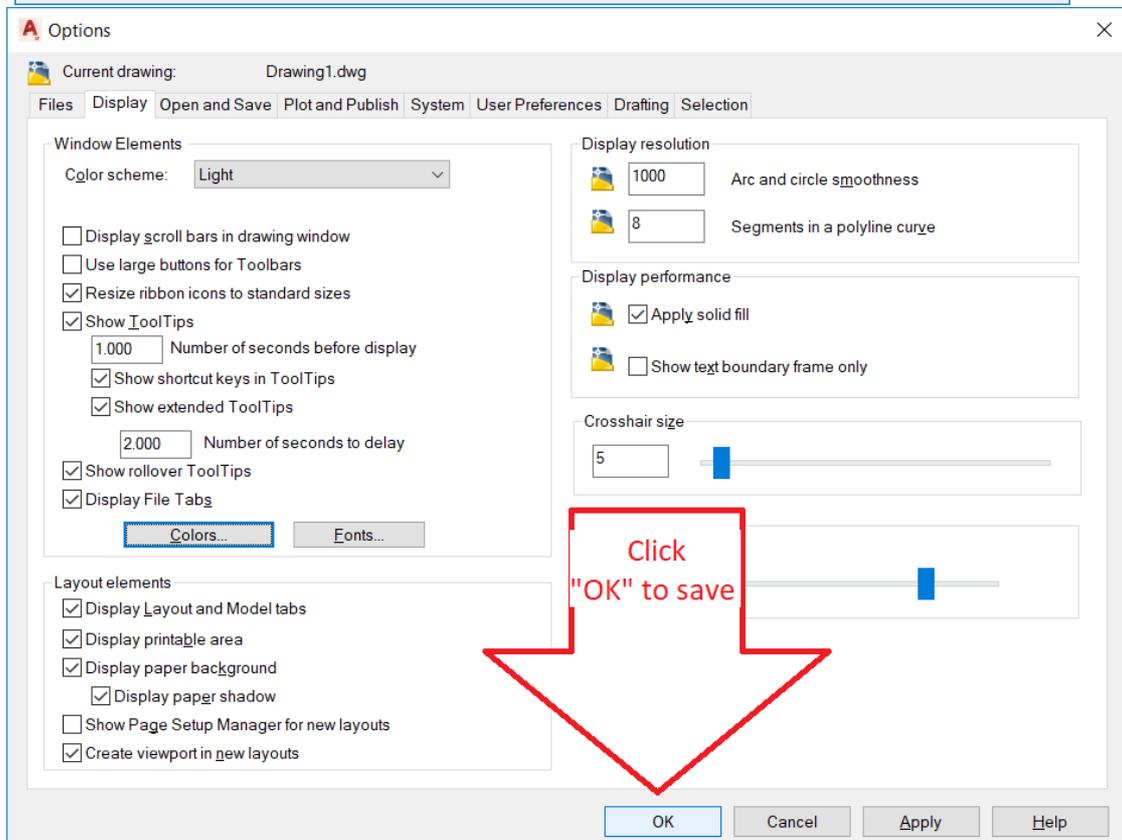


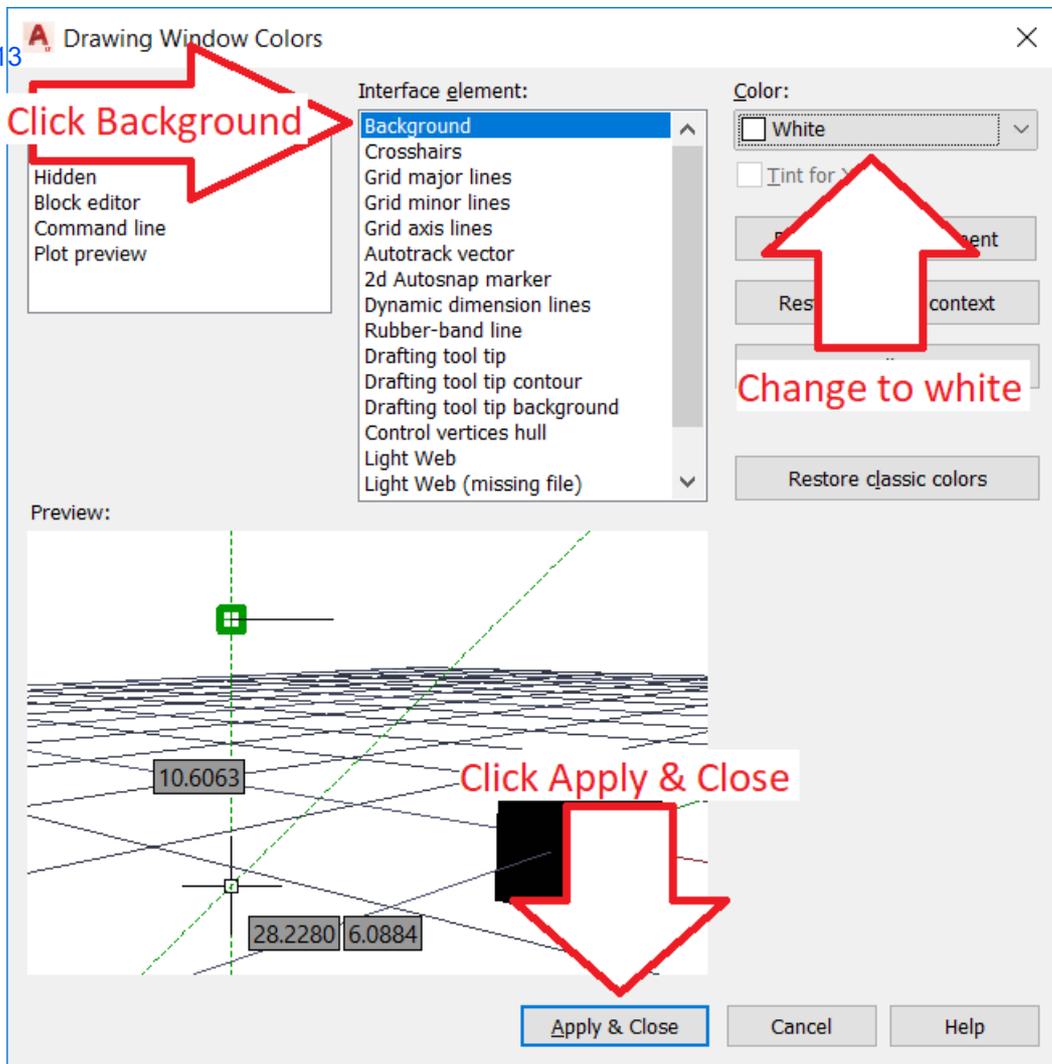

Step2 page setup: To select laser's driver as plotter device.

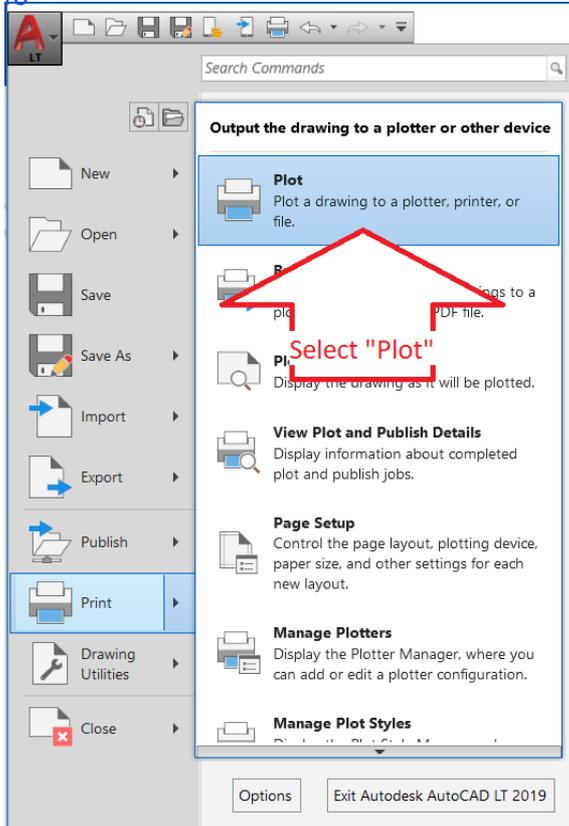


Step3: while the output device is selected, you must change the layout setting for fitting the software.

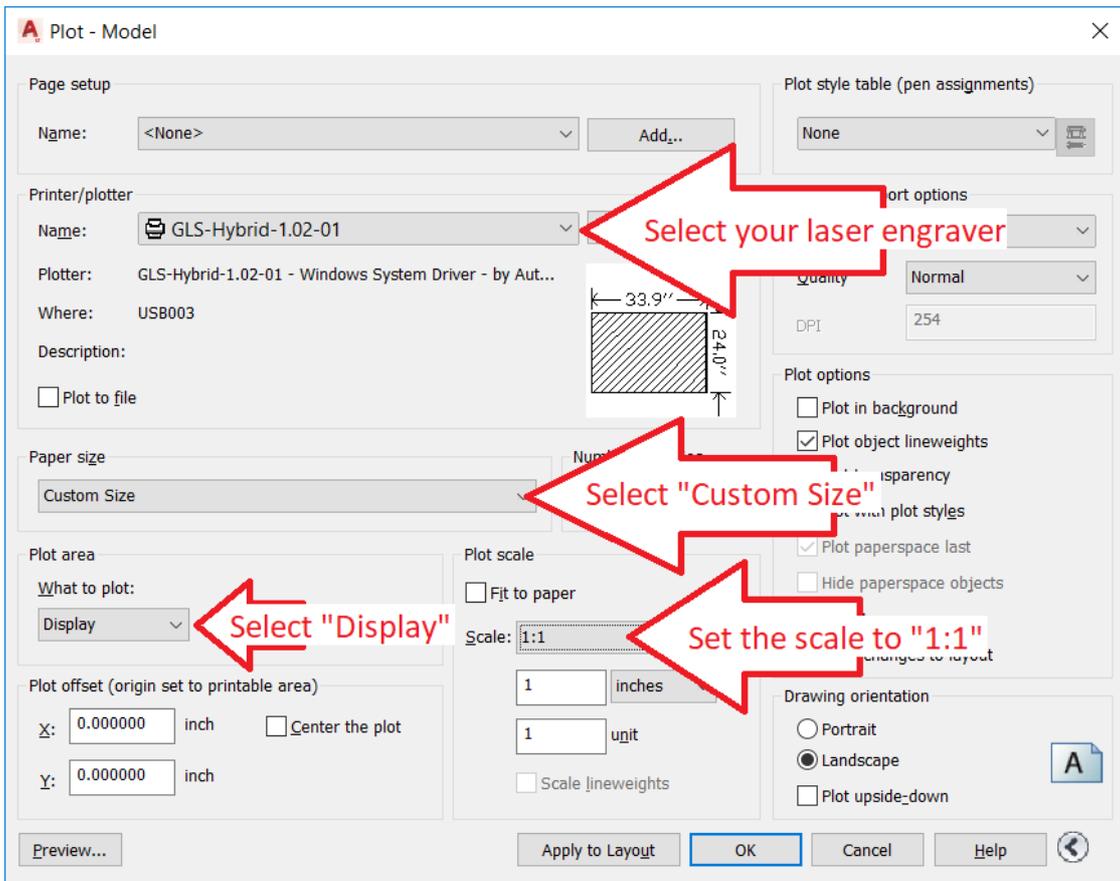


Select "Apply to Layout"



Tel: 336.288.1613 **Step4:** To change the graphic's properties to current vector mode, such as Line weight, Thickness, Pen no.

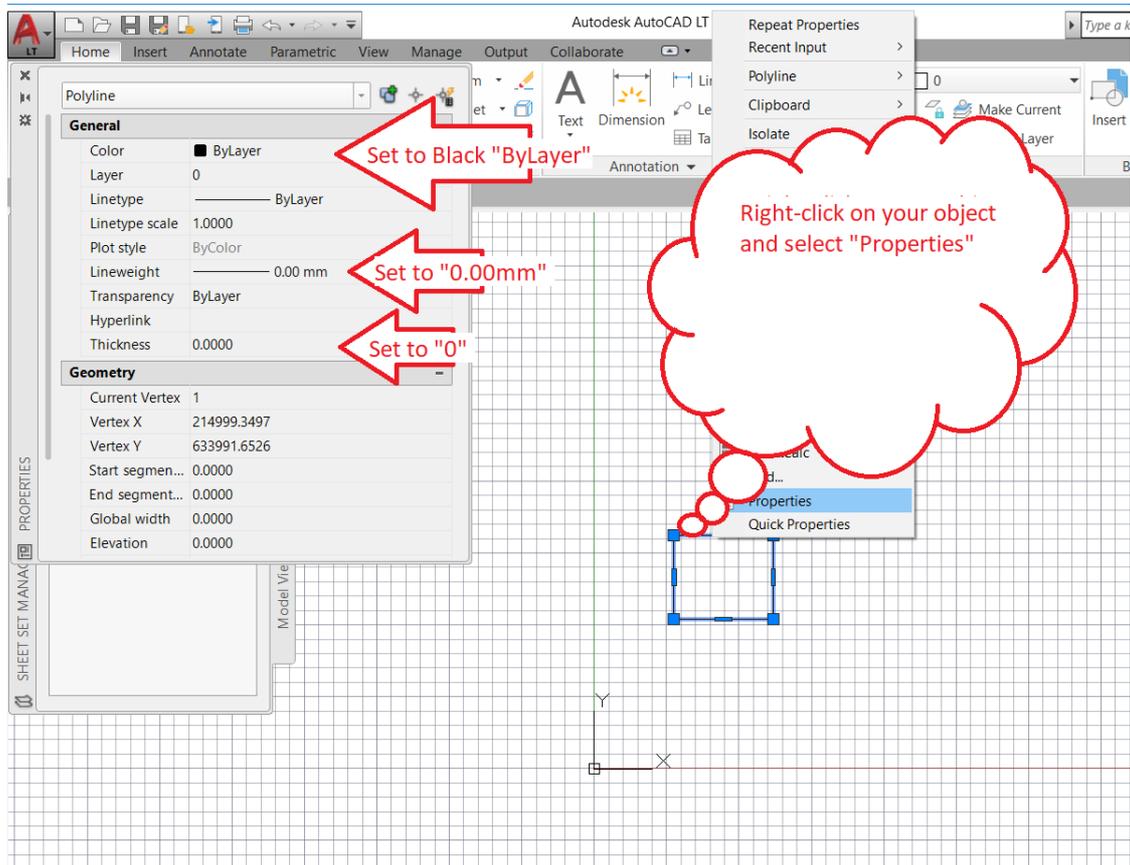


To change another object to red color for setting different parameter.

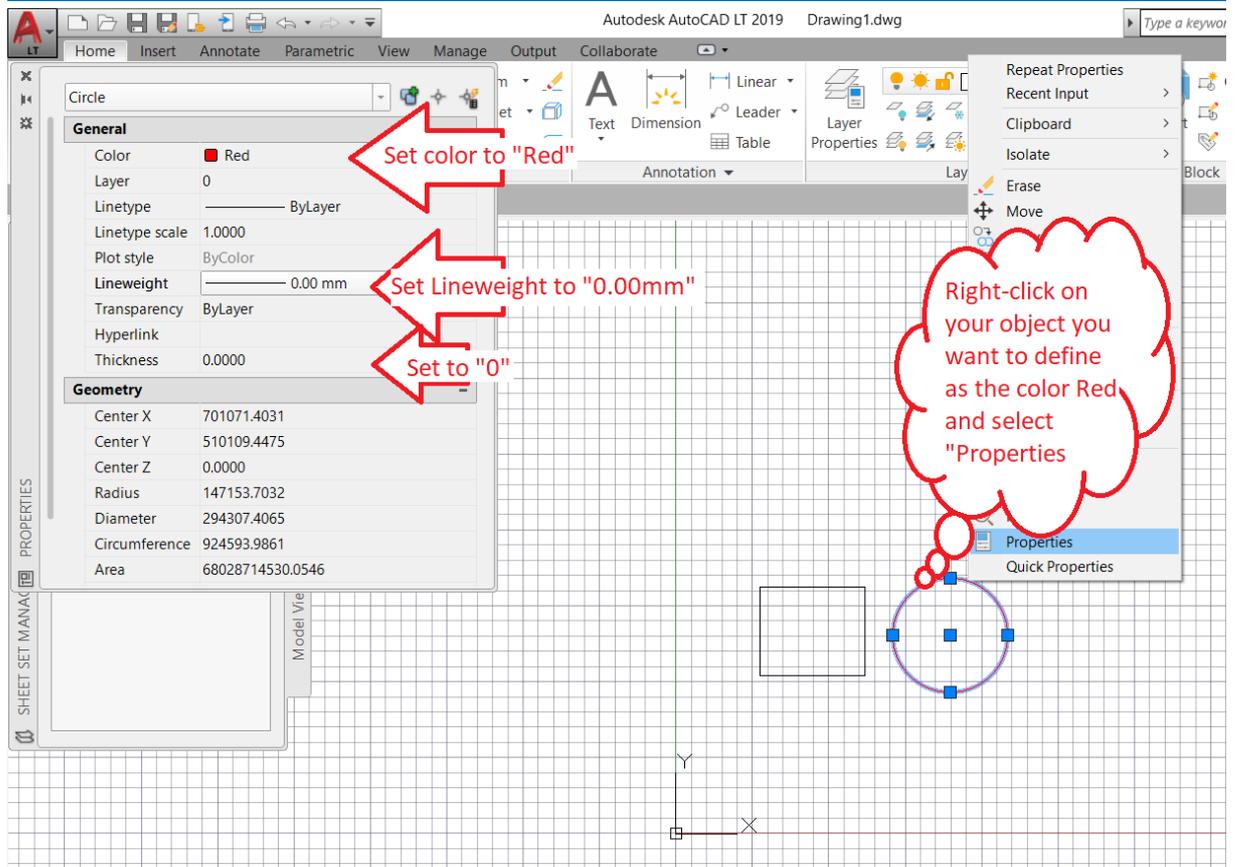


Step5: How to setup the beam power and cutting speed.

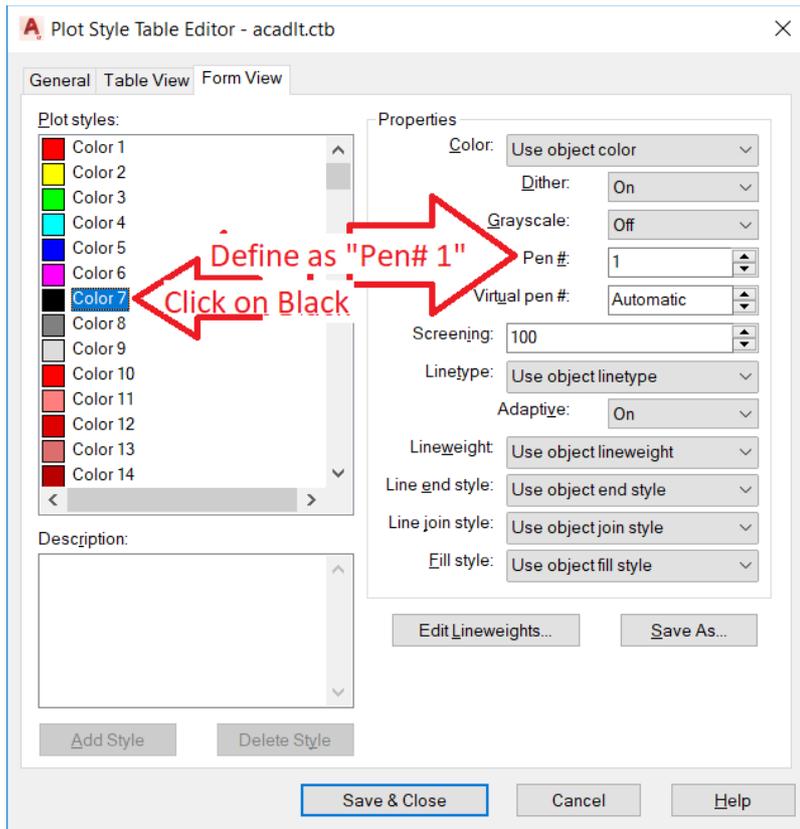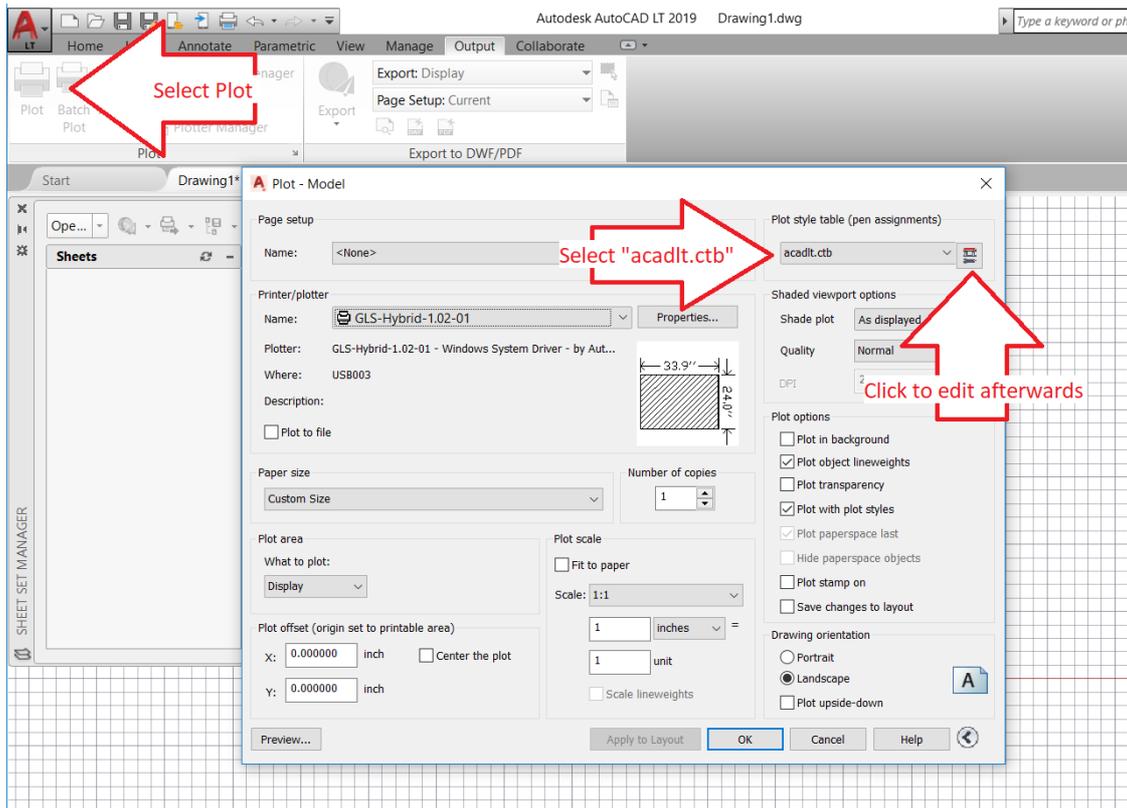


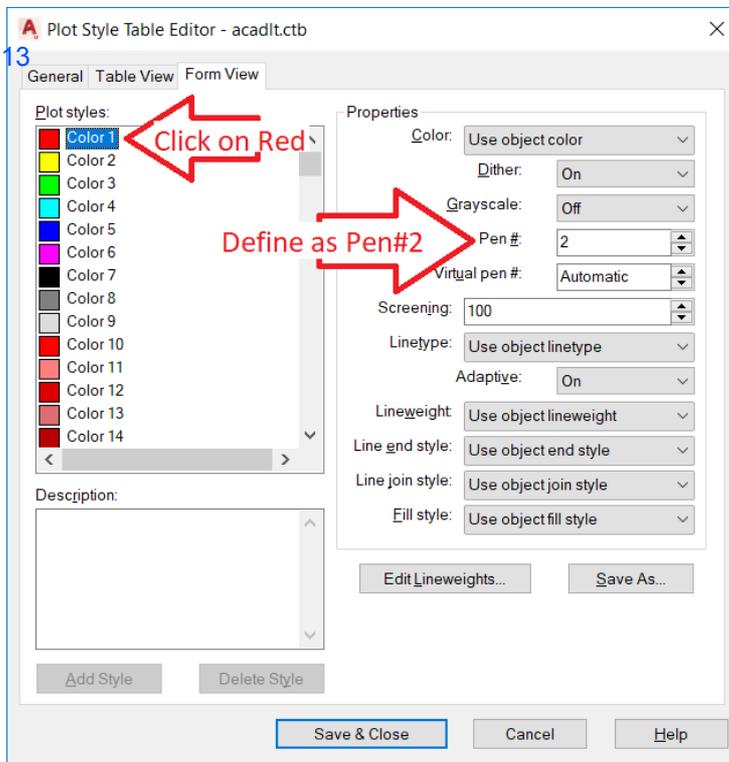



Click "Save & Close" to save the settings.

Step6: To change the properties (Power, Speed...) of Mercury's driver:

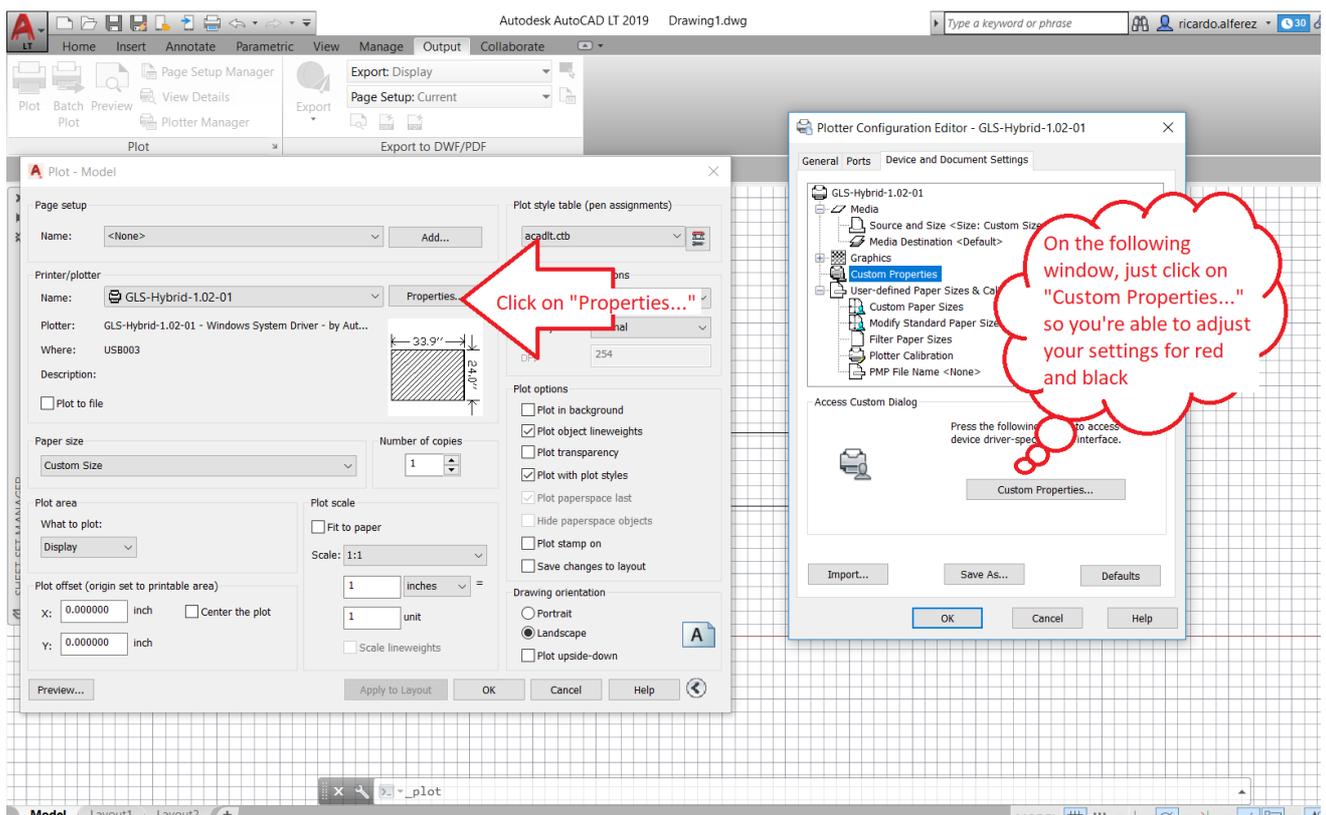


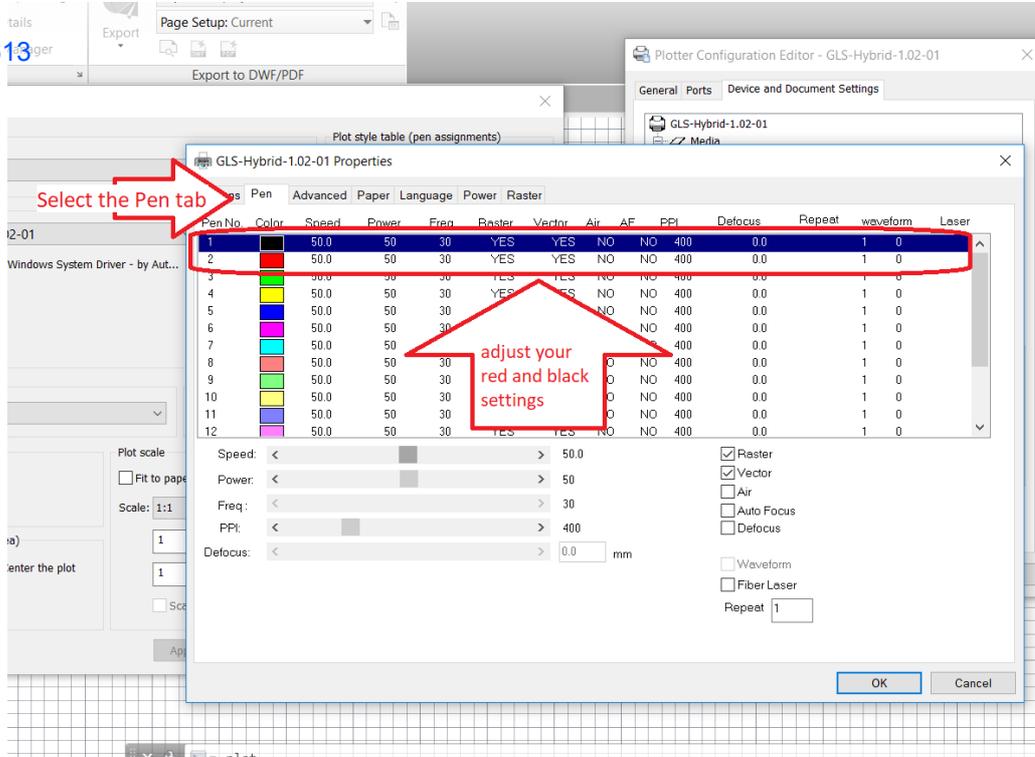

Click "Ok" when your settings are done.

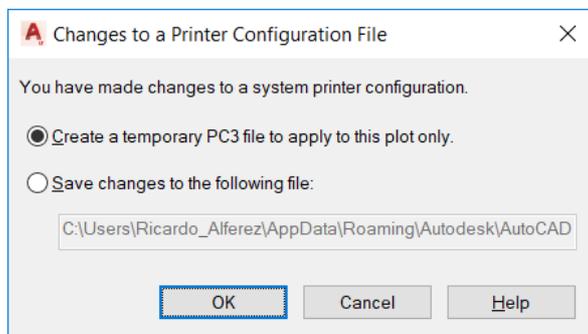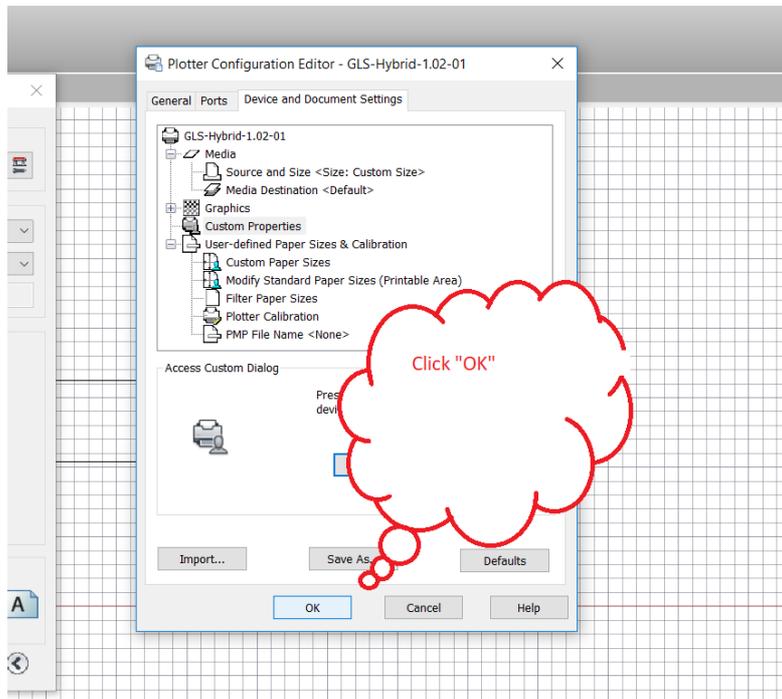

Click "OK" on the Changes to a Printer Configuration File.

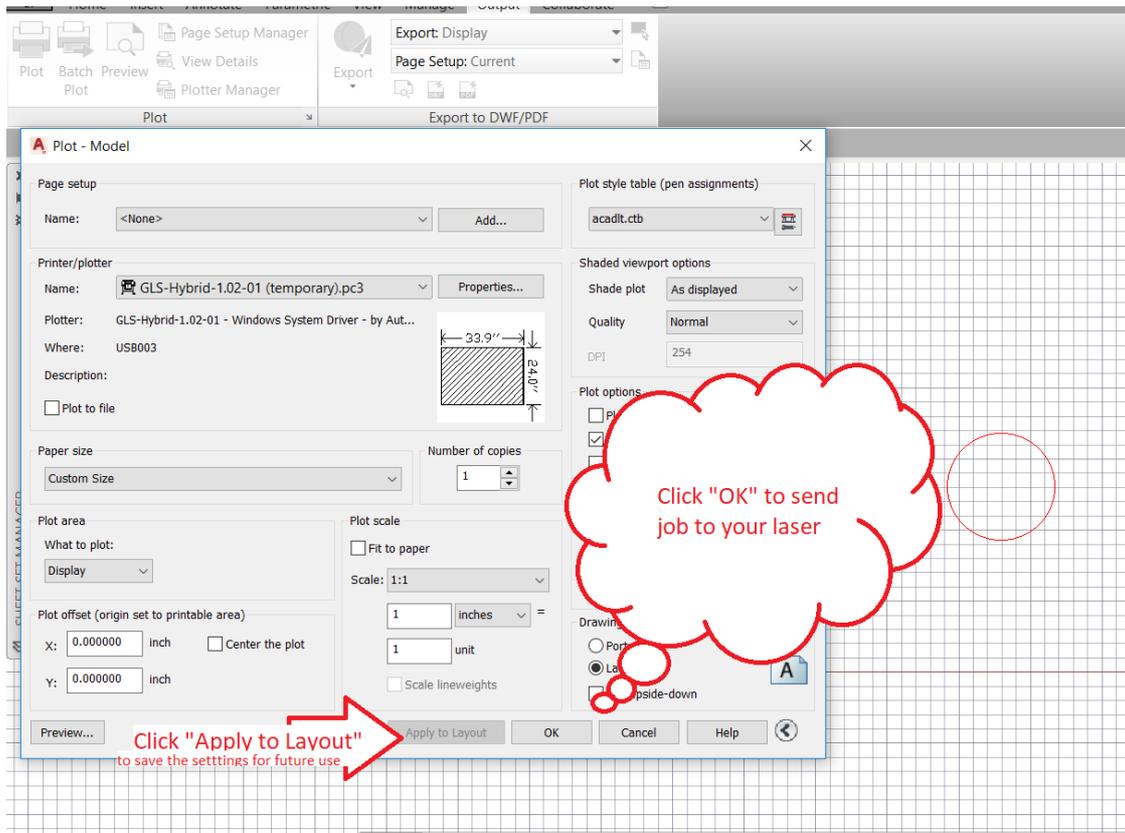

Click “OK” to send the job to your laser engraver.

