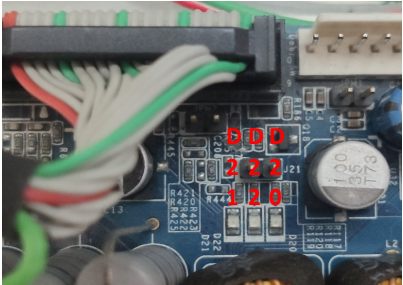
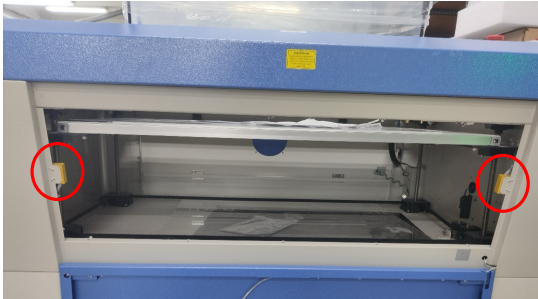
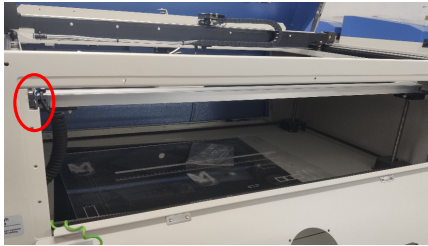
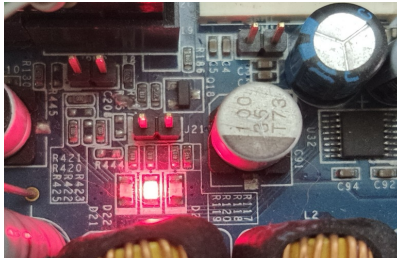
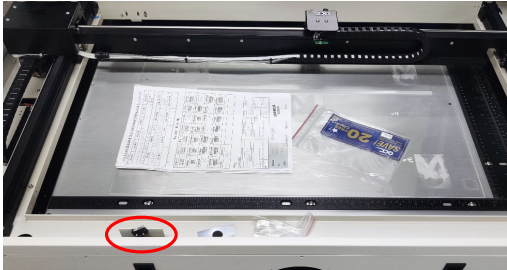
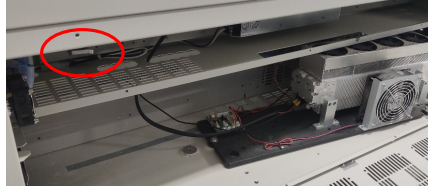
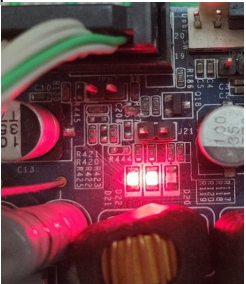


SI/SLS/GLS/GLSH Door Sensor diagnostic

Item	Driver Board light status	Check item		Corresponding Connector
1	D22、D21、D20 - OFF 	1.Front door right/left magnet 	2.Rear door (UP) level switch 	Driver Board JP3 - P1&P2 P3&P4
2	D22 - ON D21、D20 - OFF 	1.Level switch at top cover read side 	2.Rear door level switch 	Driver Board JP3 - P5&P6
3	D22、D21 - ON D20 - OFF 	1. TOP cover right magnet 2. TOP cover left magnet 		Control Panel JP15、JP14